

STANDARD OPERATING PROCEDURES
DIVISION OF COMPARATIVE MEDICINE
UNIVERSITY OF SOUTH FLORIDA

SOP#:1170

Date Issued: 04/22

Date Revised: NEW

Page 1 of 14

TITLE: **Tecniplast WiFlow AHU with Guardian**
SCOPE: Research and Animal Care Personnel
RESPONSIBILITY: Professional & Administrative Staff
PURPOSE: To outline the Proper Procedures for Use and Maintenance of the Tecniplast WiFlow AHU with Guardian System.

I. PURPOSE

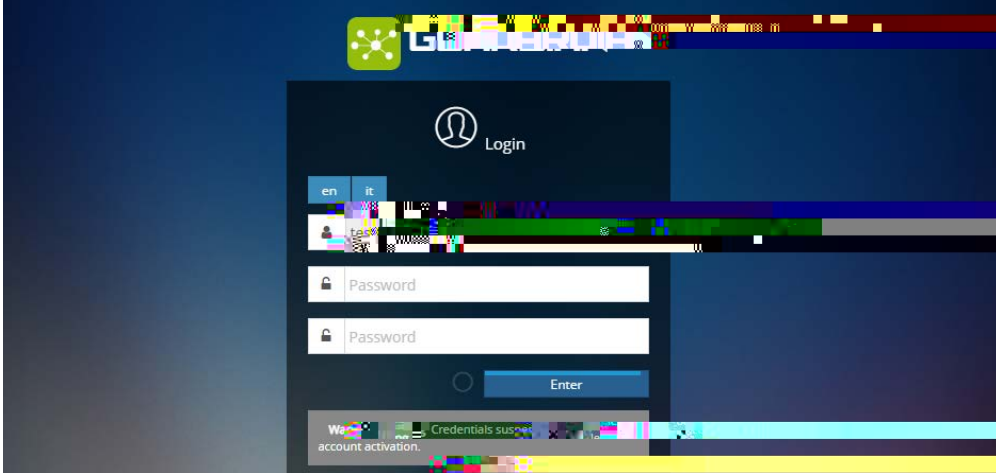
1. This procedure outlines the use and maintenance of the Tecniplast WiFlow with Guardian used to provide ventilation to the rat IVCs.


II. RESPONSIBILITY


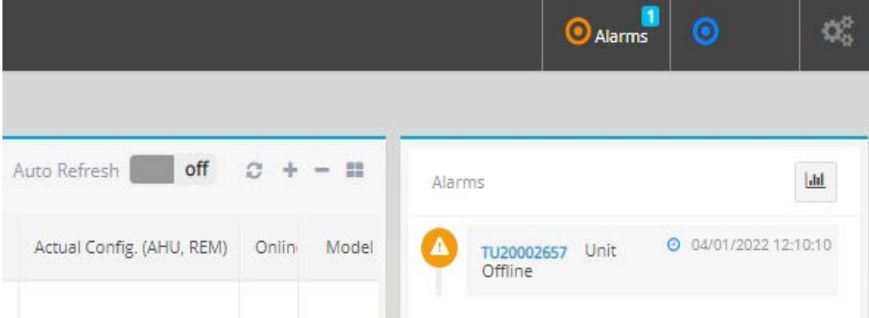
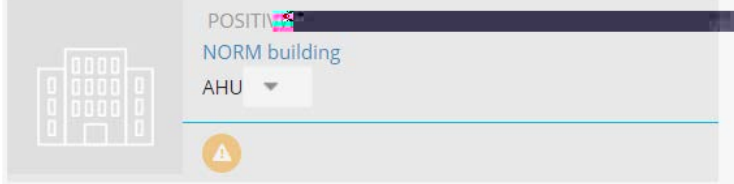
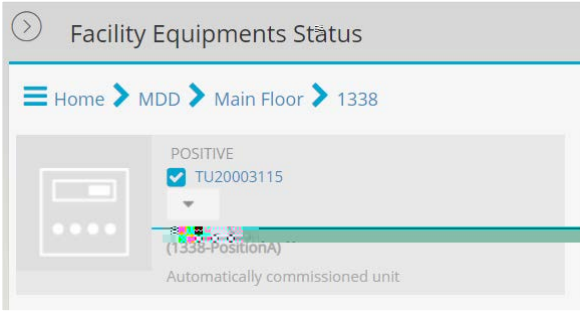
1. It is the responsibility of the Facility Manager to ensure that equipment is appropriately cleaned, maintained in good working order, and available for research personnel as requested.
2. It is the responsibility of the veterinary professional, administrative, and managerial staff to ensure that all research and technical staff using this equipment are adequately trained and experienced in the use of the Tecniplast WiFlow with Guardian AHU.

III. GUARDIAN SYSTEM ACCOUNT SET-UP, LOG IN, AND USE

Steps	First Login
1	<p>Access the Guardian website URL: https://10.43.74.7/WDMWEB Note: You must be connected to the USF network or VPN to access the Guardian website.</p>


Steps	First Login (continued)
2	<p>Log in with your username. (First letter of first name + full last name). Upon the first login, your password will be the same as your username.</p> <p>Example: <i>Username: emorton</i> <i>Password: emorton</i></p>
3	 <p>The system will prompt to create a new password. Type a new password in both fields and click Enter.</p>

Steps	Create New Account
1	 <p>Click Accounts Manager under the Administration tab</p>
2	<p>Click Add</p>

Steps	Notifications
	<p>Notifications occur when a unit goes offline, if minimum or maximum temperatures are breached, or if maximum humidity levels are breached.</p>  <p>Users set to receive notifications will get an email from guardian@usf.edu</p>
1	<p>To find more information about the unit you are being notified for, access the Guardian Website URL: https://10.43.74.7/WDMWEB and log into your account.</p>
2	 <p>Alarms will show in the upper righthand corner of the homepage</p>
3	 <p>There will be a blinking orange indicator showing which building has the unit causing the alarm. Click on the building and follow the indicator to find the exact unit causing the alarm.</p>  <p>Example: Building > Floor > Room > Unit</p> <p>Note: Alarms will clear from the system automatically once the issue is resolved</p>

IV. WIFLOW AHU START UP

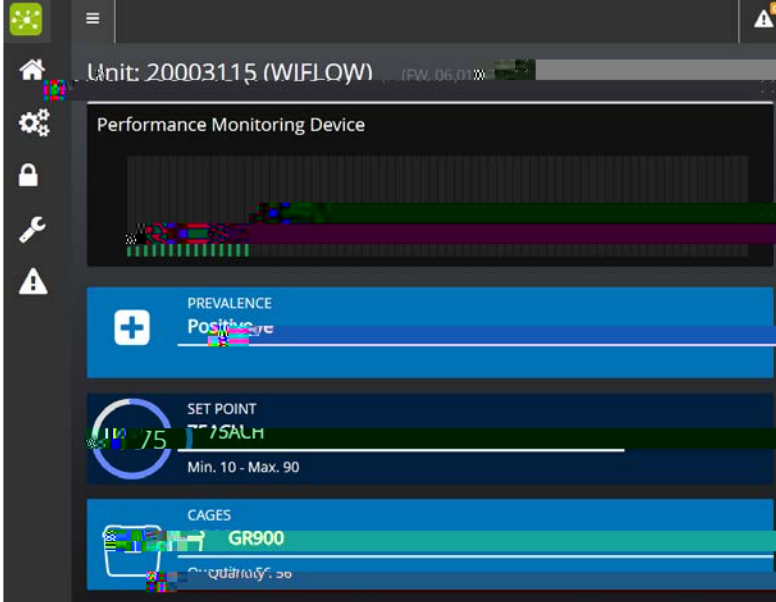
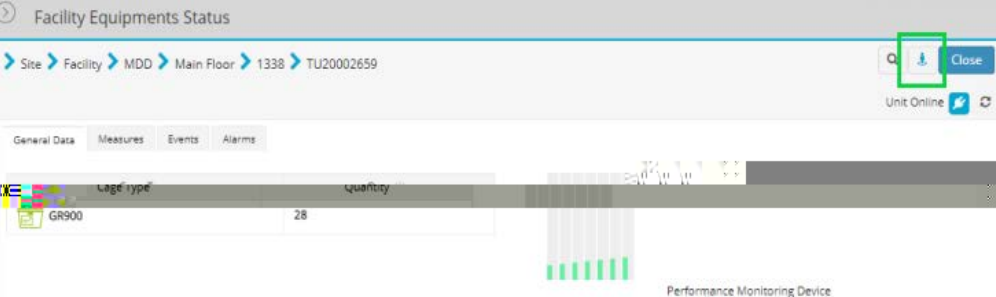
1. **Plug in** the WiFlow air handling unit (AHU) and **turn on** the electrical power. The power switch is located on the top back left side of the AHU.
2. Ensure the WiFlow AHU is **plugged into the correct ethernet port**.
3. A correct association between WiFlow AHU serial number (SN), animal facility acronym and room number, and ethernet port number are required. This is referred to as the buoy location. Consult an Assistant Director or veterinarian for assistance.
4. Log in using One2One by first finding the units SN in your smart device's Bluetooth in Settings.
5. Ensure that the pressure mode and air changes per hour (ACH) correspond to that which is required by the specific animal housing needs served. If not appropriately set, refer to the User Manual. All AHU units should be set on **Positive mode** except those used in ABSL-2 biocontainment or quarantine housing rooms, which should be set on **negative** mode.
6. **Positive** mode (most rooms) should be set at 70-75 ACH, with the exhaust HEPA filtered at -20-33%. **Negative** mode (biocontainment, quarantine) should be set at 70-75 ACH, with the exhaust HEPA filtered at 20%.
7. **The user passcode for changing default settings is 10.**
8. Complete temperature and humidity settings for the WiFlow AHU. Typical temperature settings for the WiFlow AHU are 64° F minimum and 88° F maximum and typical WiFlow AHU humidity settings are 10% minimum and 90% maximum.

Sections	WiFlow Unit
1	

Guardian Power Indicator

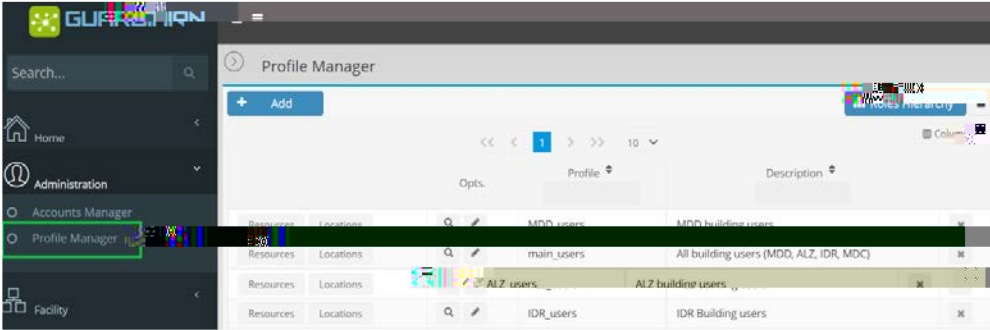


- x Solid green light: The unit is connected to the Guardian server
- x

Top of Unit
x

Steps	One2One (continued)
4	 <p>Open your internet browser such as Safari or Chrome. Type in any URL address such as www.guardian.com or www.yourname.com</p> <p>You will then be connected to the One2One interface of the unit where you can manage settings and unit configurations such as temperature or number of cages.</p>
5	<p>After 5 minutes of inactivity, the One2One interface will turn off automatically. To manually turn it on, press and hold the One2One button for a few seconds until the blue light turns on.</p>
6	 <p>The One2One interface can also be accessed through the Guardian website. Click the One2One icon on the equipment status page of the unit to open a new browser window to the One2One interface webpage.</p>

Steps

Facility Guardian Functions

Steps	Manage Profiles
1	 <p>Click Profile Manager under the Administration tab</p>
2	 <p>Click Add</p>
3	 <p>Enter in the new profile information and select Add to save changes.</p> <ul style="list-style-type: none"> x Profile: Profile name x Description: Description of profile permissions x Parent Profile: Keep as default facility guardian
4	

	<p>In Profile Manager, click Resources to allocate which resources of the Guardian website the profile will have permission to.</p>
--	--

Steps	Manage Profiles (continued)
5	<p>In the Resources window select Disabled, Read, or Full for each resource.</p> <ul style="list-style-type: none">x Disabled: profile user will not be able to view or make changes to resourcex Read: profile user will only be able to view resourcex Full: profile user will be able to view and make changes to resource <p>Recommended Resources Setting Select Full permission for the below resources:</p> <ul style="list-style-type: none">x Structure Editor (under Facility tab)x Facility Equipment Status (under Home tab)x Equipment Configurations (under Setup tab) <p>Select Disabled permission for all other resources</p>
6	<p>In Profile Manager, click Locations to allocate which facilities each profile can manage.</p>

	<p>Click on the icon next to each label to add or remove locations for each profile.</p>
--	--

V.

